



## **FIBERME Communications LLC.**

---

FCM630A Series - SIP Trunks Guide

# Table of Content

<b>INTRODUCTION.....</b>	<b>3</b>
<b>REGISTER SIP TRUNKS .....</b>	<b>4</b>
Configuration .....	4
DID / DOD Configuration.....	9
Direct Inward Dialing (DID) .....	9
Direct Outward Dialing (DOD).....	10
Create Outbound/Inbound Routes .....	12
Create Inbound Routes .....	12
Create Outbound Routes .....	13
<b>PEER TRUNK.....</b>	<b>15</b>
Configuration .....	15
Outbound Routes Configuration .....	21
Inbound Routes Configuration .....	22
<b>TIME CONDITION .....</b>	<b>24</b>
<b>TRUNK GROUPS .....</b>	<b>26</b>
<b>FAILOVER TRUNK.....</b>	<b>27</b>



# Table of Figures

Figure 1: FCM630A Typical Scenario .....	3
Figure 2: Create New Register Trunk.....	5
Figure 3: Register Trunk.....	8
Figure 4: Register Trunk Status .....	8
Figure 5: Inbound Rule - ByDID.....	10
Figure 6: Create New DOD.....	11
Figure 7: DOD List .....	12
Figure 8: Register Inbound Route.....	13
Figure 9: Outbound Route Example.....	14
Figure 10: SIP Peer Trunk .....	15
Figure 11: Create New Peer Trunk.....	16
Figure 12: Edit Peer Trunk.....	19
Figure 13: Enable Qualify .....	20
Figure 14: Peer Trunk Status .....	20
Figure 15: PEER Trunk - Create New Outbound Rule .....	22
Figure 16: PEER Trunk - Create New Inbound Rule .....	23
Figure 17: Outbound Time Office.....	24
Figure 18: Out Of Office Time .....	25
Figure 19: Trunk Group .....	26
Figure 20: Trunk Group Configuration.....	26
Figure 21: Adding Failover Trunk.....	27

# Table of Tables

Table 1: Register Trunk Parameters.....	6
Table 2: Extension/Trunk → VoIP Trunks .....	16
Table 3: Extension/Trunk → VoIP Trunks → Advanced Settings .....	17




## INTRODUCTION

SIP trunks are a VoIP service that can be provided from an ITSP (Internet Telephony Service Provider) to extend telephony features beyond IPPBX local area. SIP trunks can carry voice calls, video calls, instant messages, multimedia conferences, and other SIP-based, real-time communications services.

Using SIP trunks helps to reduce call rates especially when making long distance calls, since VoIP providers can offer better calling rates compared to local ISP using analog lines.

FCM630A series support two types of SIP trunks: “Register SIP trunks”, mainly used to connect with provider’s trunk and “Peer trunks”, that can be used to interconnect multiple IP-PBXs. FCM630A series support up to 200 SIP trunks.

This guide describes needed configuration to set up register trunk (with provider) and peer trunk (between two FCM630A).

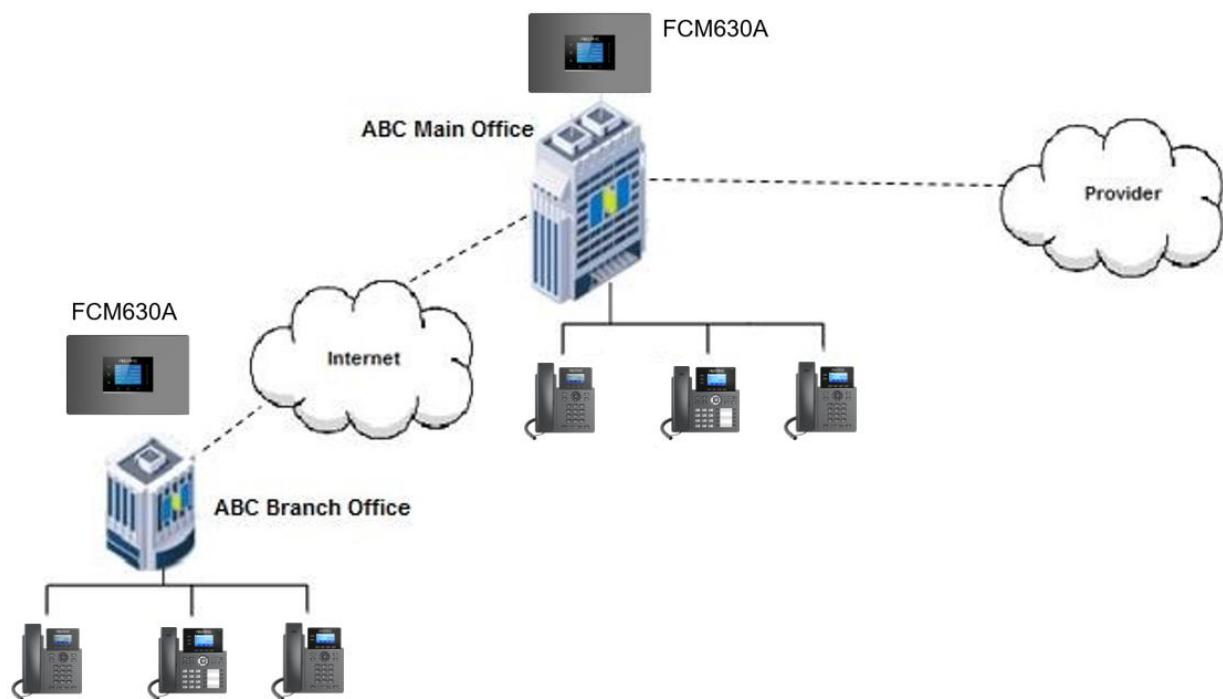

**Figure 1: FCM630A Typical Scenario**

The figure above shows a typical scenario using two FCM630A between main and branch offices (connected via peer trunk), and main office FCM630A connected to provider via register SIP trunk.



## REGISTER SIP TRUNKS

In this guide, we will take company ABC as example. The company has purchased two SIP trunks; the first one will be used for international calls, while the second will be used of national ones.

The ITSP provider gave following trunk information to the company ABC in order to register their trunks.


SIP trunk information	Value
<b>SIP Trunk 1</b>	
<b>Provider address</b>	sip.provider.com
<b>Username</b>	0655441000
<b>Authenticate ID</b>	0655441000
<b>Password</b>	admin123
<b>Main number</b>	0655441000
<b>Provided DIDs</b>	0655441001 / 0655441002 / 0655441003 / 0655441004 / 0655441005 / 0655441006 / 0655441007 / 0655441008 / 0655441009 / 0655441010
<b>SIP Trunk 2</b>	
<b>Provider address</b>	sip.provider.com
<b>Username</b>	0655441100
<b>Authenticate ID</b>	0655441100
<b>Password</b>	admin123
<b>Main number</b>	0655441100
<b>Provided DIDs</b>	0655441101 / 0655441102 / 0655441103 / 0655441104 / 0655441105 / 0655441106 / 0655441107 / 0655441108 / 0655441109 / 0655441110

### Setup considerations:


- Extensions range on FCM630A in main office is 1000 – 1999.
- Dialing to international numbers should be prefixed with 99 with no size limits.
- National numbers start with 06 with 10-digit length.

### Configuration


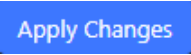
Below steps to configure SIP Trunk 1 on Main office FCM630A. Same steps apply to configure Trunk 2.

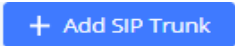1. Access FCM630A web GUI → **Extension / Trunk** → **VoIP Trunks**.
2. Click on  , in the following screenshot type in Trunk 1 credentials:



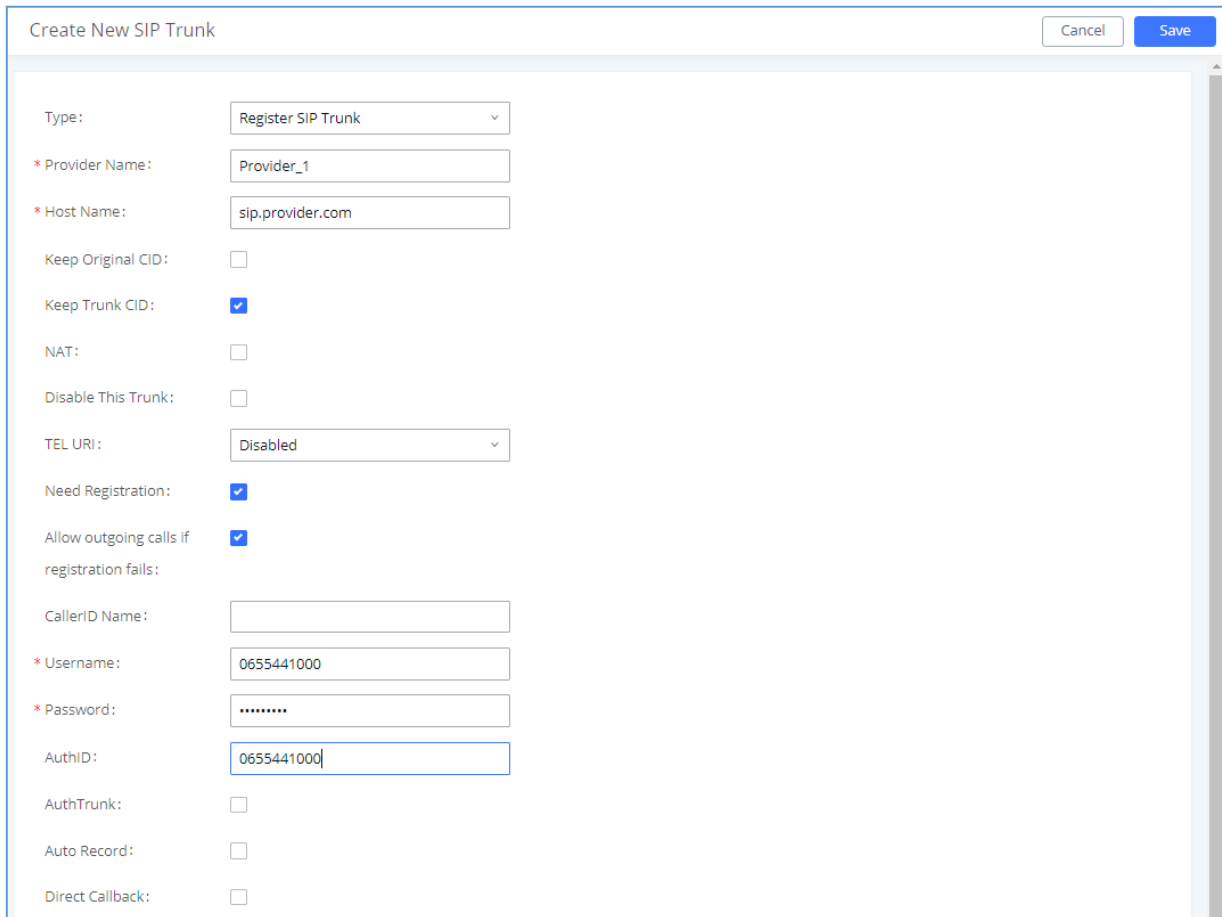

**Figure 2: Create New Register Trunk**

- Select “**Register SIP Trunk**” as Type.
  - Type in a reference name for **Provider Name**. For example: “Provider\_1”.
  - Enter provider’s FQDN/IP address in **Host Name** field. In this example: “sip.provider.com”.
  - Enter **Username** to register to the provider. In this example: “0655441000”.
  - Enter **Authenticate ID** to register to the provider. In this example: “0655441000”.
  - Enter **Password** associated with username. In this example: “admin123”.
3. Click  and  to store and apply the configuration.

Above steps describe basic configuration needed to register a SIP trunk. Depending on providers, users may need to adjust their settings to successfully register a SIP trunk.

The table below describes main parameters available for Register SIP Trunks:




Table 1: Register Trunk Parameters

Fields	Description
<b>Keep Original CID</b>	Keep the CID from the inbound call when dialing out. This setting will override “Keep Trunk CID” option. Please make sure that the peer PBX at the other side supports to match user entry using “username” field from authentication line.
<b>Keep Trunk CID</b>	<p>If enabled, the trunk CID will not be overridden by extension’s CID when the extension has CID configured. The default setting is “No”.</p> <p>If enabled and <b>Keep Original CID</b> is disabled, the callee will see the ID set on Username field of FCM630A, in this case “0655441000”.</p>
<b>NAT</b>	Turn on this option when the PBX is using public IP and communicating with devices behind NAT. If there is one-way audio issue, usually it’s related to NAT configuration or SIP/RTP port configuration on the firewall.
<b>Disable This Trunk</b>	<p>If selected, the trunk will be disabled.</p> <p><b>Note:</b> If a current SIP trunk is disabled, FCM630A will send UNREGISTER message (REGISTER message with expires=0) to the SIP provider.</p>
<b>TEL URI</b>	<p>If the trunk has an assigned PSTN telephone number, this field should be set to "User=Phone". Then a "User=Phone" parameter will be attached to the Request-Line and TO header in the SIP request to indicate the E.164 number. If set to "Enable", "Tel:" will be used instead of "SIP:" in the SIP request. The default setting is disabled.</p> <ul style="list-style-type: none"> <li>• If set to <b>Disabled</b>, the <b>TO</b> header in this example will be “To: &lt;sip:0655441000@sip.provider.com&gt;”.</li> <li>• If set to <b>User=Phone</b>, the <b>TO</b> header in this example will be “To: &lt;sip: 0655441000@ sip.provider.com;user=phone&gt;”.</li> <li>• If set to <b>Enabled</b>, the <b>TO</b> header in this example will be “To: &lt;tel: 0655441000&gt;”.</li> </ul>
<b>Need Registration</b>	Select whether the trunk needs to register on the external server or not when "Register SIP Trunk" type is selected.
<b>Allow outgoing calls if registration failure</b>	<p>If enabled outgoing calls even if the registration to this trunk fail will still be able to go through.</p> <p>Note that if we uncheck “Need Registration” option, this option will be ignored.</p>
<b>CallerID Name</b>	<p>Configure the Caller ID name that will be sent on the from header in INVITE message</p> <p><u>Example:</u></p> <p>Caller ID set to “FMTest”, the “From” header will be:</p> <p><i>From: "FMTest" &lt;sip:0655441000@fcm1.abc.com&gt;;tag=f268</i></p>











<b>From Domain</b>	<p>Configure the actual domain where the extension comes from.</p> <p><u>Example:</u> If set to "fm.test.com", the "From" header will be as shown below:</p> <p style="text-align: center;"><i>From: &lt;sip:0655441000@fm.test.com&gt;;tag=f268</i></p>
<b>From User</b>	<p>Configure the actual user name of the extension.</p> <p><u>Example:</u> If set to "0655447777", it will override username in "From" header as shown below:</p> <p style="text-align: center;"><i>From: &lt;sip:0655447777@fm.test.com&gt;;tag=f268</i></p>
<b>Username</b>	<p>Enter the username to register to the trunk from the provider when "Register SIP Trunk" type is selected.</p> <p>Important Note: When making outgoing calls, the following priority order rule will be used to determine which CallerID will be set before sending out the call :</p> <ul style="list-style-type: none"> <li>From user (Register Trunk Only) → CID from inbound call (<b>Keep Original CID Enabled</b>) → Trunk Username/CallerID (<b>Keep Trunk CID Enabled</b>) → DOD → Extension CallerID Number → Trunk Username/CallerID (<b>Keep Trunk CID Disabled</b>) → Global Outbound CID.</li> </ul>
<b>Password</b>	<p>Enter the password to register to the trunk from the provider when "Register SIP Trunk" is selected.</p>
<b>Auth ID</b>	<p>Enter the authentication ID for "Register SIP Trunk" type.</p> <p><b>Note:</b> This is the SIP service subscriber's ID used for authentication. If not configured the Extension Number will be used for authentication.</p>
<b>Auth Trunk</b>	<p>If enabled, the FCM will send 401 response to the incoming call to authenticate the trunk.</p>
<b>Auto Record</b>	<p>Enable automatic recording for the calls using this trunk (for SIP trunk only). The default setting is disabled. The recording files can be accessed under web GUI → CDR → Recording Files.</p>
<b>Direct Callback</b>	<p>Allows external numbers the option to get directed to the extension that last called them.</p>

After saving the new VoIP trunk, it will be displayed under **Web UI → Extension / Trunk → VoIP Trunks**

as shown below. Press  to edit trunk settings if needed.






VoIP Trunks					
VoIP Trunks					Trunk Group
+ Add SIP Trunk		+ Add IAX Trunk			
PROVIDER NAME	TERMINAL TYPE	TYPE	HOSTNAME/IP	USERNAME	OPTIONS
Provider_1	SIP	register	sip.provider.com	0655441000	   
Provider_2	SIP	register	sip.provider.com	0655441100	   
< 1 >					Total: 2    10 / page    Goto 1

**Figure 3: Register Trunk**

Once the trunk has been created, users can check its registration status under **System Status** → **Dashboard** page.

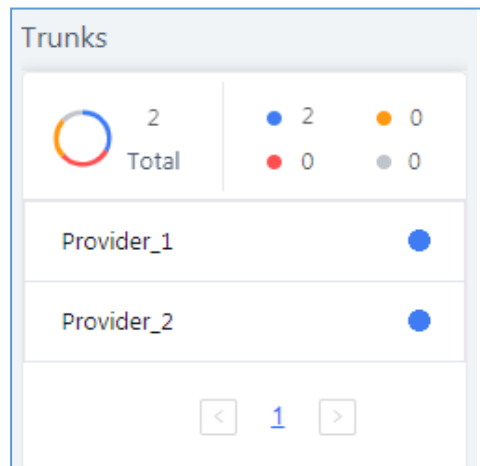

**Figure 4: Register Trunk Status**

**Note:** If status shows “Rejected”, it means that FCM630A didn’t get registered with the provider. Verify that provider’s server is reachable from FCM630A and double confirm trunk credentials.



## DID / DOD Configuration

### Direct Inward Dialing (DID)

DID (Direct Inward Dialing) is a service provided by the ITSP to subscribers using IP-PBX, adding possibility to route incoming calls to a specific DID to a specific extension. Using DIDs, it will allow extensions to be reachable from outside directly without going through main office number.

In this example, following DIDs have been provided with first trunk "Provider\_1": 0655441000 / 0655441001 / 0655441002 / 0655441003 / 0655441004 / 0655441005 / 0655441006 / 0655441007 / 0655441008 / 0655441009 / 0655441010.

Company wants to redirect incoming calls to specific extensions using provided DIDs. FCM630A in main office is using extensions range: 1000 – 1999.

**Note:** Make sure **DID** Mode is set correctly under trunk advanced settings. Provider may include DIDnumber in "Request-line" or "To-header".

Following configuration can be done to achieve this:

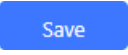
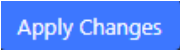
1. Access FCM630A Web UI → **Extension/Trunk** → **Inbound Routes**. Select "Trunk 1" and press "**Add**" button.
2. In **DID Pattern** field, enter "\_0655441XXX".
3. Configure **ByDID** as **Default Destination** and check "Extension" in "DID Destination" options.
4. Configure **Strip** field. In this example: Strip=6 to remove first 6 digits from incoming number and keep last 4 digits. If call is coming to **0655441007**, FCM630A will strip 065544 and keep 1007.
5. Click  and  to apply configuration.




Figure 5: Inbound Rule - ByDID

## Direct Outward Dialing (DOD)


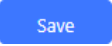
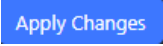
The FCM630A provides Direct Outward Dialing (DOD) which is a service of a local phone that allows extensions within a company ABC's FCM to connect to outside lines directly.


We will use Company's ABC trunk 0655441000 with 11 DIDs associated to it. At the moment when a user makes an outbound call their caller ID shows up as the main office number which is 0655441000. This creates a problem as the CEO would like that his calls come from his direct line. This can be accomplished by configuring DOD for the CEO's extension. Other group members also can benefit from DOD to have their own line shown when making calls.

Steps on how to configure DOD on the FCM630A:

1. To setup DOD go to FCM630A Web UI → **Extension/Trunk** → **VoIP Trunks** page.
2. Click  to access the DOD options for the selected SIP Trunk.
3. Click **"Create a new DOD"** to begin your DOD setup.
4. For **"DOD Number"**, enter one of the numbers (DIDs) from your SIP trunk provider. In this example, we will enter in the number for the CEO's direct line (0655441000).



5. If extension number need to be appended to the DID number click on "Add Extension".
6. Select an extension from the "Available Extensions" list. Users have the option of selecting more than one extension. In this case, we would select the CEO's extension. After making the selection,click on the  button to move the extension(s) to the "Selected Extensions" list.
7. Click  and  to apply configuration.

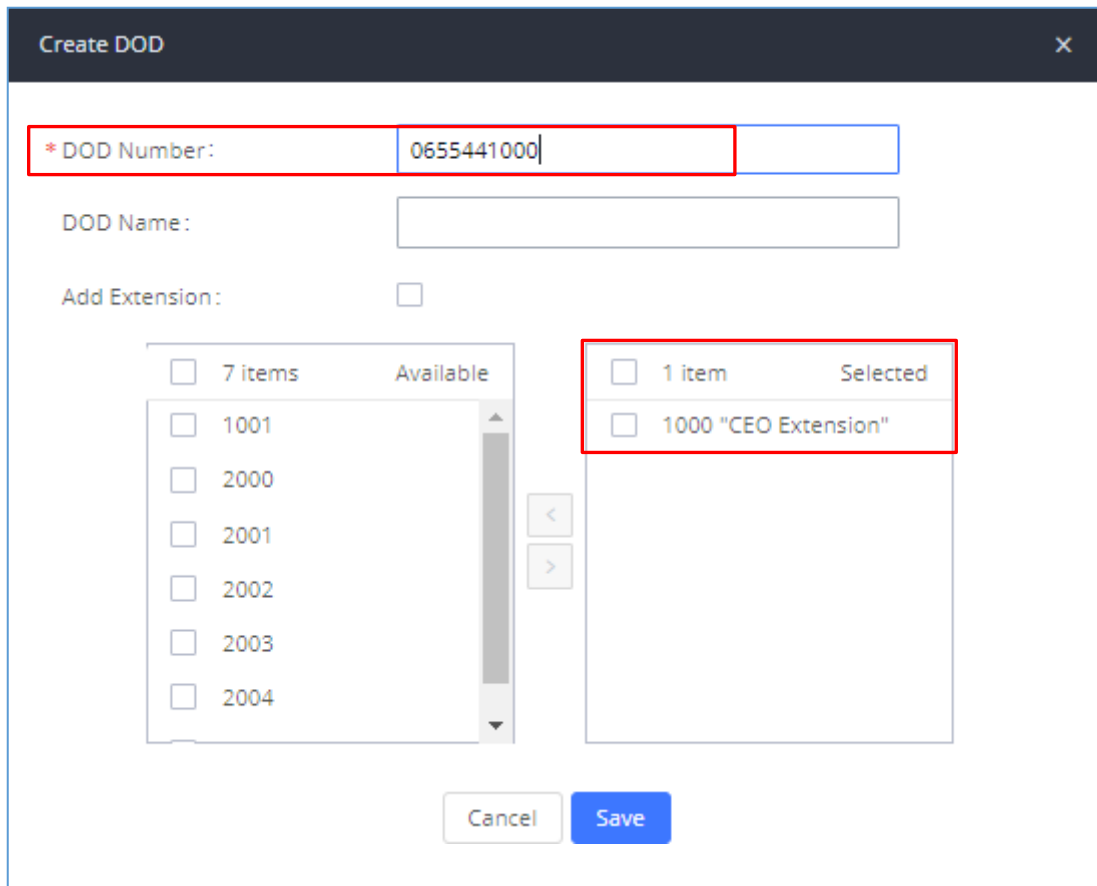

The screenshot shows a "Create DOD" dialog box. At the top, the title bar reads "Create DOD" with a close button (X). Below the title bar, there is a form with the following fields and controls:

- A red-bordered input field labeled "\* DOD Number:" containing the text "0655441000".
- An empty input field labeled "DOD Name:".
- An "Add Extension:" checkbox, which is currently unchecked.
- Two list boxes. The left list box is titled "Available" and contains 7 items: 1001, 2000, 2001, 2002, 2003, and 2004. The right list box is titled "Selected" and contains 1 item: 1000 "CEO Extension".
- Between the two list boxes are left and right arrow buttons.
- At the bottom of the dialog are "Cancel" and "Save" buttons.

Figure 6: Create New DOD







Users can press "Edit DOD" to check/add/delete extensions that are associated to a particular DOD.



< DOD

Direct Outward Dialing (DOD) is a service of a local phone company or local exchange carrier that allows subscribers within a company's PBX system to connect to outside lines directly.

[+ Add DOD](#)

DOD	DOD NAME	EXTENSIONS	OPTIONS
0655441001		1001 1002	 
0655441005		1004 2000	 
0655441010		1000	 

Total: 3    10 / page    Goto 1

Figure 7: DOD List

## Create Outbound/Inbound Routes

In this section we will give an example of creating Outbound and Inbound Rules for trunk 1 "Provider\_1" to allow receiving incoming calls and to be redirected to IVR and to allow outgoing calls to be made.

### Create Inbound Routes

1. Access FCM630A Web UI → **Extension/Trunk** → **Inbound Routes**. Select "Trunk 1" and press "**Create New Inbound Rule**".
2. In **DID Pattern** field, enter "**\_X**". This allows all incoming calls to be received.
3. Set **IVR** as **Default Destination**. (Assuming IVR is pre-configured).
4. Click [Save](#) and [Apply Changes](#) to apply configuration.



**Figure 8: Register Inbound Route**

For time condition based Inbound route, please refer to **TIME CONDITION**.

### Create Outbound Routes

1. Go to **Web UI → Extension/Trunk → Outbound Routes**.
2. Click on **“Add”** button to create a new outbound route.
3. Enter the **Calling Rule Name, Pattern** and choose “Provider\_1” in **Use Trunk**.

In below figure, we set “Pattern” to “\_06XXXXXXXX” to allow only dialed numbers with leading 06 and 10-digit length to be accepted. Extensions with privilege “Internal” or higher can use this route/trunk.

**Note:** Users can add comments to a dial plan by typing “/\*” and “\*/” before and after each comment respectively, in our example we can set the pattern to: “\_06XXXXXXXX /\*route1\*/”



**Figure 9: Outbound Route Example**

Another outbound route should be set using “Provider\_2” with following parameters:

- **Pattern:** “\_99X.” (to allow only dialed numbers with leading 99 to be authorized).
- **Privilege:** International for instance.
- **Strip:** “2” (to remove prefix 99 before calling out).

To dial international numbers such as 0016175669300, users need to have privilege “International” in used extension and dial 990016175669300.

**Note:** For time condition based Outbound Routes, please refer to **TIME CONDITION**.



## PEER TRUNK

In this chapter, we will consider that company ABC has a branch office equipped with FCM630A, and they want to be able to communicate between the two offices.

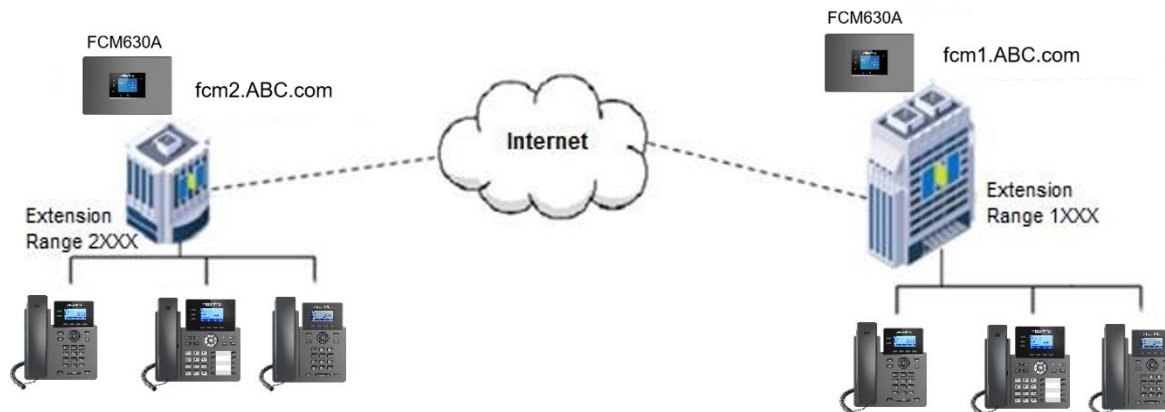


Figure 10: SIP Peer Trunk

### Assuming following:

- Both FCM630A have public IP addresses;
- Or both FCM630A are on the same LAN/VPN using private or public IP addresses;
- Or both FCM630A can be connected through a router using public or private IP addresses (with necessary port forwarding or DMZ).
- FCM630A in main office is using extensions range 1XXX, while FCM630A in branch office is using extensions range 2XXX.

### Configuration

Following steps need to be done on both FCM630A in both locations:

1. Access FCM630A's web GUI → **Extension / Trunk** → **VoIP Trunks**.
2. Click on **+ Add SIP Trunk**, and enter following parameters:
  - Select "Peer SIP Trunk" for Type.
  - Enter a reference name. In this example: **toBranch**.
  - In **Host Name** field, enter the IP address/domain of the other FCM630A. In this case "fcm2.abd.com" is the domain name of the branch office.
3. Click **Save** and **Apply Changes** to apply configuration.





If the host is not a numeric IP address, but the port number is present in the URI, the FCM performs an A or AAAA record lookup of the domain name. If a domain is configured without a port number, the FCM will do an SRV record lookup.

Type: Peer SIP Trunk

\* Provider Name: To\_Branch

\* Host Name: fcm2.abc.com

Transport: UDP

Keep Original CID:

Keep Trunk CID:

NAT:

Disable This Trunk:

TEL URI: Disabled

CallerID Number:

Figure 11: Create New Peer Trunk

The tables below describe basic and advanced parameters available for PEER trunks:

Table 2: Extension/Trunk → VoIP Trunks

Field	Description
<b>Keep Original CID</b>	<p>Keep the CID from the inbound call when dialing out. This setting will override “Keep TrunkCID” option. Please make sure that the peer PBX at the other side supports to match user entry using “username” field from authentication line.</p> <ul style="list-style-type: none"> <li>If enabled, user at extension 1000 will see 2000 as UserID.</li> </ul>
<b>Keep Trunk CID</b>	<p>If enabled, the trunk CID will not be overridden by extension’s CID when the extension has CID configured. The default setting is “No”.</p> <ul style="list-style-type: none"> <li>If enabled and <b>Keep Original CID</b> is disabled, user at extension 1000 will see the ID set on <b>Caller ID</b> field.</li> </ul>
<b>NAT</b>	<p>Turn on this setting when the PBX is using public IP and communicating with devices behind NAT. If there is one-way audio issue, usually it is related to NAT configuration or SIP/RTP port support on the firewall.</p>
<b>Disable This Trunk</b>	<p>If checked, the trunk will be disabled. Note: If a current SIP trunk is disabled, FCM will send UNREGISTER message (REGISTER message with expires=0) to the SIP provider.</p>
<b>TEL URI</b>	<p>If the trunk has an assigned PSTN telephone number, this field should be set to “User=Phone”. Then a “User=Phone” parameter will be attached to the Request-Line and TO header in the SIP request to indicate the E.164 number. If set to “Enable”, “Tel:” will be used instead of “SIP:” in the SIP request. The default setting is disabled.</p> <ul style="list-style-type: none"> <li>If <b>TEL URI</b> is set to <b>Disabled</b>, the <b>TO</b> header will be “To: &lt;sip:1000@fcm1.abc.com&gt;”.</li> </ul>



	<ul style="list-style-type: none"> <li>If <b>TEL URI</b> is set to <b>User=Phone</b>, the <b>TO</b> header will be “To: &lt;sip:1000@ fcm1.abc.com;user=phone&gt;”.</li> <li>If TEL URI is set to <b>Enabled</b>, the <b>TO</b> header will be “To: &lt;tel:1000&gt;”.</li> </ul>
<b>Caller ID</b>	<p>Configure the Caller ID. This is the number that the trunk will try to use when making outboundcalls. For some providers, it might not be possible to set the CallerID with this option and this option will be ignored.</p> <p>Important Note: When making outgoing calls, the following priority order rule will be used to determine which CallerID will be set before sending out the call :</p> <ul style="list-style-type: none"> <li>CID from inbound call (<b>Keep Original CID</b> Enabled) → Trunk Username/CallerID(<b>Keep Trunk CID</b> Enabled) → DOD → Extension CallerID Number → Trunk Username/CallerID (<b>Keep Trunk CID</b> Disabled) → Global Outbound CID.</li> </ul>
<b>Caller ID Name</b>	<p>Configure the name of the caller to be displayed when the extension has no CallerID Nameconfigured.</p> <p><b>Note:</b> This Option needs <b>Keep Trunk CID</b> Feature enabled</p> <ul style="list-style-type: none"> <li>If the Caller ID Name is set on the trunk, the “From” header will include this name as shown below: From: "FMTTest" &lt;sip:2000@ fcm2.abc.com &gt;;tag=f268</li> </ul>
<b>Auto Record</b>	<p>Enable automatic recording for the calls using this trunk (for SIP trunk only). The default setting is disabled. The recording files can be accessed under web GUI→CDR→Recording Files</p>
<b>Direct Callback</b>	<p>Allows external numbers the option to get directed to the extension that last called them.</p>

**Table 3: Extension/Trunk → VoIP Trunks → Advanced Settings**

Fields	Description
<b>Codec Preference</b>	<p>Select audio and video codec for the VoIP trunk. The available codecs are: PCMU, PCMA,GSM, AAL2-G.726-32, G.726, G.722, G.729, G.723, iLBC, ADPCM, H.264, H.263, H.263p.</p> <ul style="list-style-type: none"> <li>The selected codecs will be sent on the SDP field from top to bottom to the other FCM in order to negotiate the codec to use during the call.</li> </ul>
<b>Send PPI Header</b>	<p>If enabled, the SIP INVITE message sent to the trunk will contain PPI(P-Preferred-Identity) header. The default setting is “No”.</p> <p><b>Note:</b> “Send PPI Header” and “Send PAI Header” cannot be enabled at the same time. Only one of the two headers is allowed to be contained in the SIP INVITE message.</p> <p>If enabled the SIP header will contain the following: P-Preferred-Identity: sip:2000@ fcm2.abc.com</p> <p>This feature is needed by the provider “some providers use PPI others use PAI”</p>



<b>Send PAI Header</b>	<p>If enabled, the SIP INVITE message sent to the trunk will contain PAI (PAsserted-Identity) header. The default setting is "No". Note: "Send PPI Header" and "Send PAI Header" cannot be enabled at the same time. Only one of the two headers is allowed to be contained in the SIP INVITE message.</p> <p style="text-align: center;">If enabled the SIP header will contain the following: P-Asserted-Identity: sip:2000@fcm2.abc.com</p> <p style="text-align: center;">This feature is needed by the provider "some providers use PPI others use PAI"</p>
<b>Passthrough PAI Header</b>	<p>If enabled and "Send PAI Header" is disabled, PAI headers will be preserved as calls passthrough the FCM.</p>
<b>DID Mode</b>	<p>Configure where to get the destination ID of an incoming SIP call, from SIP Request-line or To-header. The default is set to "Request-line".</p> <ul style="list-style-type: none"> <li>• If set to <b>Request-line</b>, the FCM will extract the ID from the Request-Line of the incoming INVITE and set it on the "To header" for the outgoing one.</li> <li>• If set to <b>To-Header</b>, the FCM will extract the ID from the To-Header of the incoming INVITE and set it on the "To header" for the outgoing one.</li> </ul>
<b>DTMF Mode</b>	<p>Configure the default DTMF mode when sending DTMF on this trunk.</p> <ul style="list-style-type: none"> <li>• <b>Default:</b> The global setting of DTMF mode will be used. The global setting for DTMFMode setting is under web UI → PBX → SIP Settings → ToS.</li> <li>• <b>RFC4733:</b> Send DTMF using RFC4733.</li> <li>• <b>Info:</b> Send DTMF using SIP INFO message.</li> <li>• <b>Inband:</b> Send DTMF using inband audio. This requires 64-bit codec, i.e., PCMU and PCMA.</li> <li>• <b>Auto:</b> Send DTMF using RFC4733 if offered. Otherwise, inband will be used.</li> </ul>
<b>Enable Heartbeat Detection</b>	<p>If enabled the FCM will send regularly SIP OPTIONS to check if the device is online.</p>
<b>Heartbeat Frequency</b>	<p>When "Enable Heartbeat Detection" option is set to "Yes", configure the interval (in seconds) of the SIP OPTIONS message sent to the device to check if the device is still online. The default setting is 60 seconds.</p>
<b>Maximum Number of Call Lines</b>	<p>The maximum number of concurrent calls using the trunk. The default settings 0, which means no limit.</p>
<b>SRTP</b>	<p>Enable SRTP for the VoIP trunk. The default setting is "No".</p> <ul style="list-style-type: none"> <li>• If enabled it will provide encryption, message authentication and integrity for the Audiostream.</li> </ul>
<b>IPVT Mode</b>	<p>Configures the FCM to be used exclusively for IPVT.</p> <p style="text-align: center;">Warning: This will lock out certain FCM features.</p>



### Sync LDAP Enable

If enabled, the local FCM630A will automatically provide and update the local LDAP contacts to the remote FCM630A SIP peer trunk. In order to ensure successful synchronization, the remote FCM630A peer also needs to enable this option on the SIP peer trunk. The default setting is "No".

### Enable CC





- Password and Ports need to be the same on both FCM's in order to synchronize LDAP data. Please refer to FCM630A [User Manual](#) for more detail about this feature.
- If enabled, the system will automatically alert the user when a called party is available, given that a previous call to that party failed for some reason.
- For more information about this feature please refer to the [Busy Camp On Guide](#).

After clicking Save the new VoIP trunk will be displayed under “Web UI → Extension / Trunk → VoIPTrunks” as shown below.

VoIP Trunks


Trunk Group

[+ Add SIP Trunk](#) [+ Add IAX Trunk](#)

PROVIDER NAME	TERMINAL TYPE	TYPE	HOSTNAME/IP	USERNAME	OPTIONS
To_Branch	SIP	peer	fcm2.abc.com		   

Total: 1  Goto

Figure 12: Edit Peer Trunk

Press  and go to “Advanced Settings”. Check “Enable Heartbeat Detection” option to allow FCM630A to monitor the status of each other sending regularly SIP OPTIONS to check if it's still online.



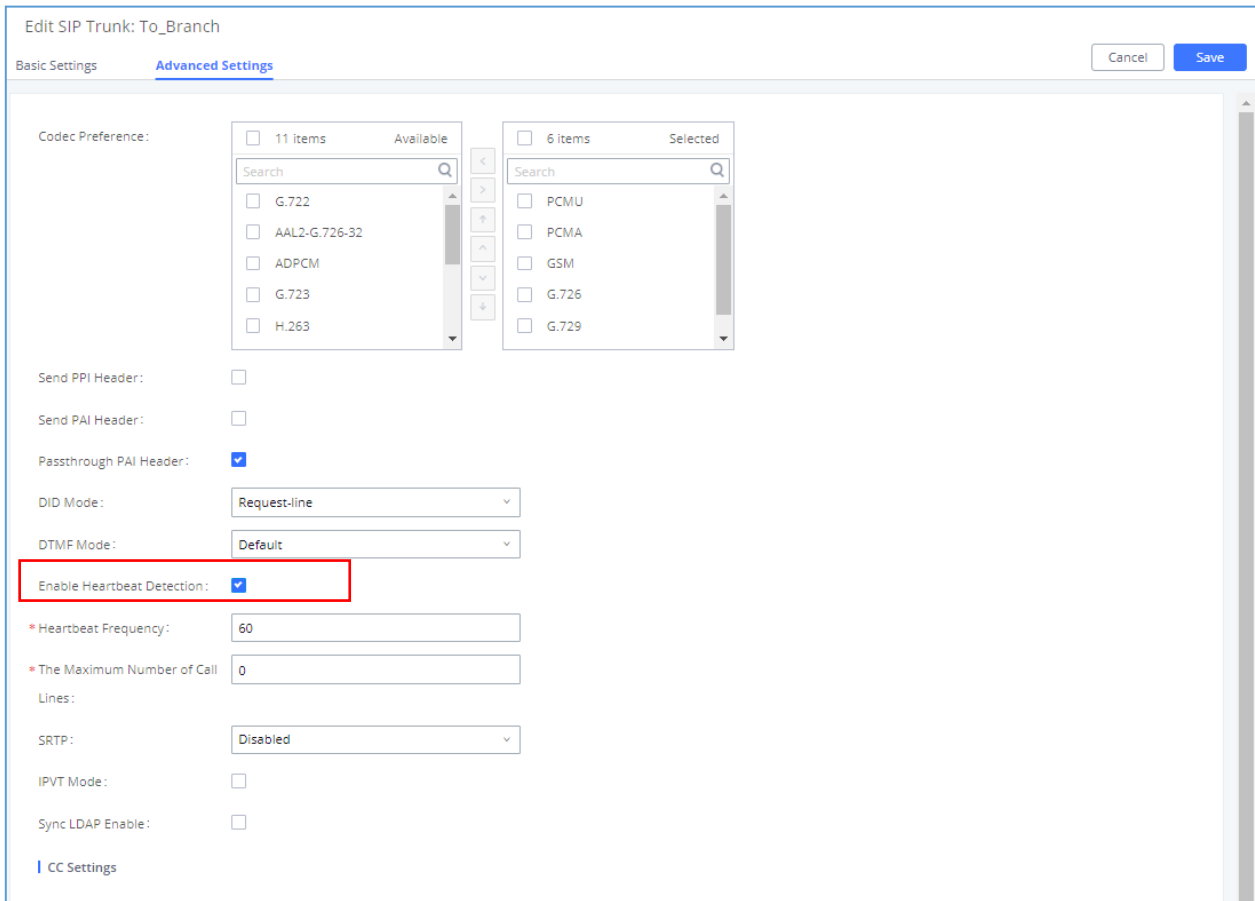


Figure 13: Enable Quality

Click **Save** and **Apply Changes** to apply configuration.

Once the trunk has been created and Enable Heartbeat Detection is set, users can view the status of thepeered trunk by navigating to the Status page.


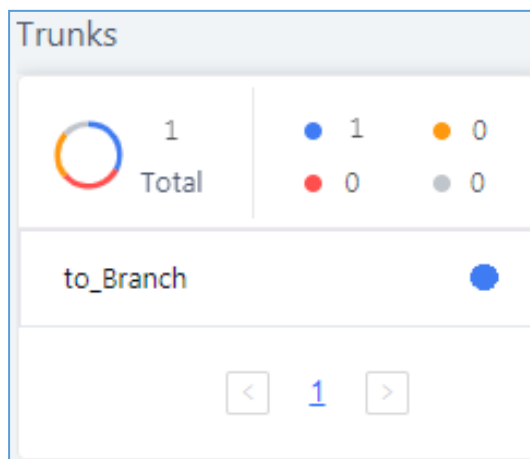




Figure 14: Peer Trunk Status

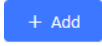

## Outbound Routes Configuration

On the main office FCM630A web GUI under “**Web UI → Extension/Trunk → Outbound Routes**”, click on . This would allow the extensions on main office to reach extensions on Branch Office.

### Configure using following parameters:

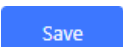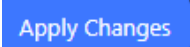1. **Calling Rule Name:** This is for reference purposes so we choose to use “toBranch”.
2. **Pattern:** The pattern used in this example is `_2XXX` since the Branch Office is using extensionrange 2XXX.
3. **Privilege Level:** Configured as “Internal”. User can change it to another privilege depending on the use case.
4. **User Trunk:** Select the SIP Trunk toBranch.
5. Click on  then .

In figure 15, the pattern “`_2XXX`” means that whenever a user on the main office calls an extension that starts with 2 and has 4 digits, this trunk will be used for the call.



**Figure 15: PEER Trunk - Create New Outbound Rule**

**Notes:**

- These steps will also apply when configuring the outbound route from Branch Office FCM630A. The pattern used will be `_1XXX` since the extension range on the Main Office is `1XXX`.
- Users also could create Time based Condition to use Outbound Routes on a specific time, please refer to TIME CONDITION for more details.

**Inbound Routes Configuration**

To create an inbound rule, on the FCM webGUI, under “**Web UI** → **Extension/trunk** →

**Inbound Routes**” click on  button.

For this example, Main Office FCM630A inbound rule needs be configured so that when an extension on the Branch Office dials, it will be routed to the specified user. Configure using following parameters:

1. **Trunks:** Select the **toBranch** trunk.
2. **DID Pattern:** Enter in the pattern “`_1XXX`” | “`_2XXX`” as shown in below figure.



3. **DID Destination:** By DID.

4. Click on **Save** then **Apply Changes**.

The screenshot shows the 'Create New Inbound Rule' configuration window. The configuration is as follows:

- \* Trunks: SIPTrunks -- To\_Branch
- \* Pattern: 1XXX
- CallerID Pattern: 2XXX
- Disable This Route:
- Allowed to seamless transfer:
- Alert-Info: None
- Fax Detection:
- Block Collect Calls:
- Prepend Trunk Name:
- Set CallerID Info:
- Enable Route-Level Inbound Mode:
- Dial Trunk:
- Allowed DID Destination: Extension
- Inbound Multiple Mode:

**Default Mode** (Mode 1)

- \* Default Destination: By DID
- Strip: 0
- Prepend:

**Time Condition**

TIME CONDITION	TIME	WEEK	MONTH	DAY	DESTINATION	OPTIONS
----------------	------	------	-------	-----	-------------	---------

**Figure 16: PEER Trunk - Create New Inbound Rule**

With this inbound rule configured, if the Main Office FCM630A receives a call from any extension with a leading 2 and containing 4 digits to any extension with a leading 1 and contains 4 digits it will be redirected by DID to corresponding extension.

**Notes:**

- Those steps will also need to be applied to the Branch Office.
- Users also could create Time based Conditions to use Inbound Routes on specific times, please refer to [TIME CONDITION] for more details.





# TIME CONDITION

Users can set time condition on Inbound/Outbound rules in order to use each route on a specific time.

Supposing that Time Conditions are already set, if more details are needed, please refer to the following guide: [FCM630A Time Condition Guide](#)

Users can setup time conditions for trunks by following below steps:

1. Access the **FCM630A Web UI** → **Extension / Trunk** → **Outbound Routes**.
2. Navigate to time condition section.
3. Select the time condition when to use this trunk. (Office Time in this example)
4. Click on “Add” to add the time condition.

The screenshot shows the 'Edit: Outbound Rule: Provider\_1' interface. It includes sections for General, Enable Filter on Source Caller ID, Call Duration Limit, Main Trunk, and Fallback Trunk. The 'Time Condition' section at the bottom contains a table with the following data:

TRUNKS	TIME CONDITION	TIME	WEEK	MONTH	DAY	OPTIONS
SIP Trunks -- Provider_1	Office Time	Default	Default	Default	Default	[Edit] [Delete] [Refresh] [Reset] [Cancel] [Save]

Figure 17: Outbound Time Office

The example above shows that on the Office Time, calls will be made using Provider\_1 trunk.



Edit Outbound Rule: Provider\_1 Cancel Save

**General**

Calling Rule Name:  Disable This Route:

Pattern:

PIN Groups:  Privilege Level:

Password:

Warning: Setting privilege level at "Internal" has potential security risks.

PIN Groups with Privilege Level:

**Enable Filter on Source Caller ID**

Enable Filter on Source Caller ID:  Outbound Route CID:

**Call Duration Limit**

Call Duration Limit:

**Main Trunk**

Trunk:

Strip:

Prepend:

**Fallover Trunk**

TRUNKS	STRIP	PREPEND	OPTIONS
SIP Trunks -- Provider_1	2		<input type="button" value="edit"/> <input type="button" value="delete"/> <input type="button" value="refresh"/> <input type="button" value="undo"/> <input type="button" value="redo"/>

**Time Condition**

Time Condition Mode:

TRUNKS	TIME CONDITION	TIME	WEEK	MONTH	DAY	OPTIONS
SIP Trunks -- Provider_2	Out of Office Time	Default	Default	Default	Default	<input type="button" value="edit"/> <input type="button" value="delete"/> <input type="button" value="refresh"/> <input type="button" value="undo"/> <input type="button" value="redo"/>

Figure 18: Out Of Office Time

The example above shows that on Out of Office Time, calls will be made using Provider\_2 trunk.



# TRUNK GROUPS

Starting from firmware 1.0.9.11 users can create VoIP Trunk Groups to registersettings on multiple accounts within the same SIP server.

This can drastically reduce the amount of time needed to manage accounts for the same server and improve the overall cleanliness of the web GUI.

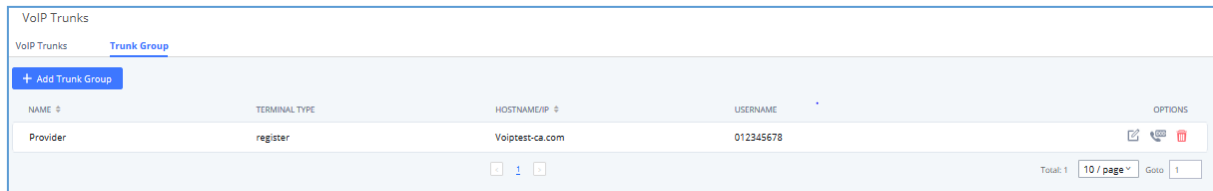



Figure 19: Trunk Group

Once creating the new trunk group and configuring the SIP settings, users can add multiple accounts within the configured SIP server by pressing button  and configuring the username, password and authentication ID fields as show in below figure:

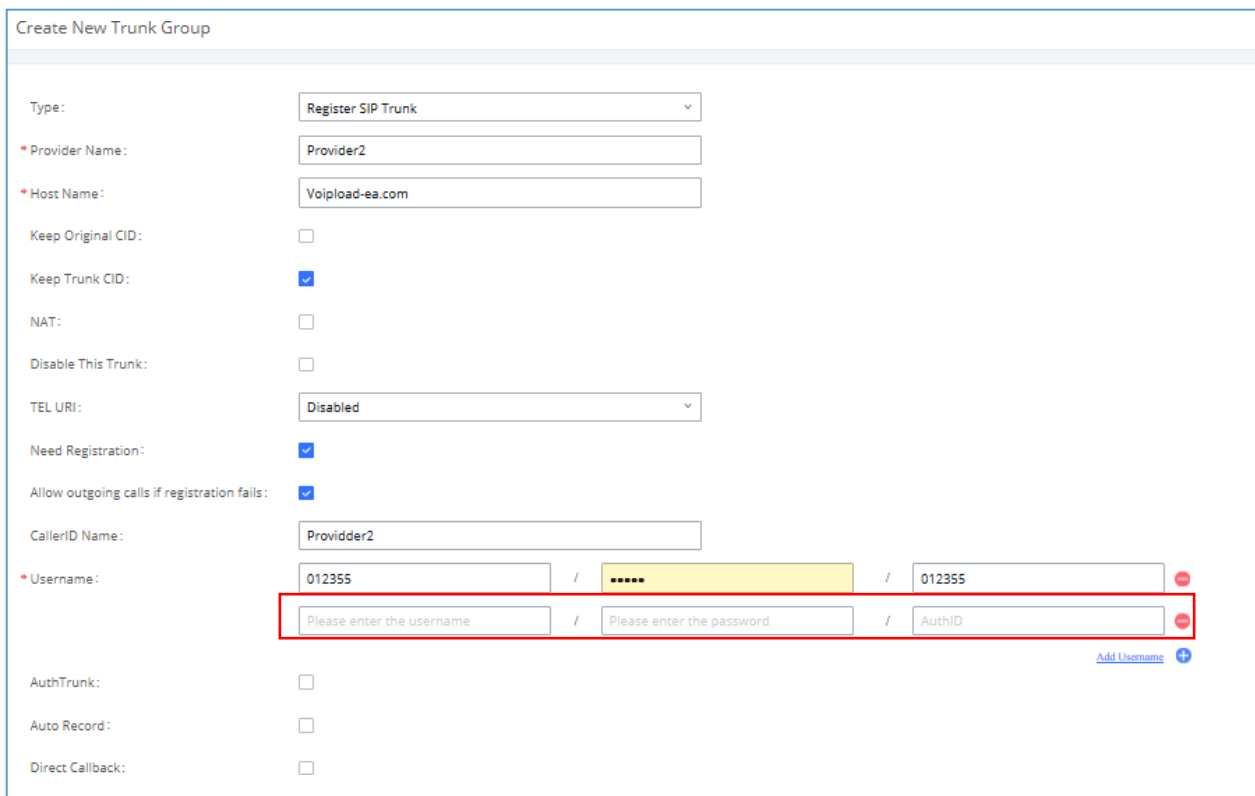


Figure 20: Trunk Group Configuration



# FAILOVER TRUNK

Failover trunks can be used to make sure that a call goes through an alternate route, when the primary trunk is busy or down.

FCM630A will use Failover trunks in following scenarios:


- No response from first trunk after 32 seconds.
- If FCM630A receives 403/407/408/503/603 SIP responses from primary trunk.
- If primary trunk is disabled.
- If primary trunk is an analog trunk and it's busy or not connected.


Users can setup failover for peer and register trunks by following below steps:

1. Go to **PBX→Basic/Call Routes→Outbound Routes**.
2. Click on **“Click to add failover trunk”**.
3. Select then the trunk to be set as failover as shown in the below figure.
4. Strip and prepend digits if needed.

The screenshot shows the configuration interface for an outbound rule. The 'Main Trunk' section is highlighted with a red box. It contains the following fields: 'Trunk' (dropdown menu with 'SIPTrunks -- Provider\_2' selected), 'Strip' (text input with '2'), and 'Prepend' (text input). The 'Failover Trunk' section contains: 'Trunk' (dropdown menu with 'SIPTrunks -- Provider\_1' selected), 'Strip' (text input with 'd'), and 'Prepend' (text input). At the bottom left of the highlighted area are 'Save' and 'Cancel' buttons. The rest of the form includes 'Calling Rule Name' (text input with 'Provider\_2'), 'Pattern' (text input with '\_xxx'), 'PIN Groups' (dropdown menu with 'None'), 'Password' (text input), 'Disable This Route' (checkbox), 'Privilege Level' (dropdown menu with 'Internal'), 'PIN Groups with Privilege Level' (checkbox), 'Enable Filter on Source Caller ID' (checkbox), 'Call Duration Limit' (checkbox), and 'Outbound Route CID' (text input). A warning message is visible below the 'Privilege Level' dropdown: 'Warning: Setting privilege level at "Internal" has potential security risks.'

Figure 21: Adding Failover Trunk

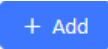Click on  to add another failover trunk.

Click on  to arrange the order. If there are multiple trunks set as failovers.

Click on  to edit, or  to delete the Trunk from Failover list.

